



Campervans Motorhomes | Rental | Sales



Email
campervans@autorent.com.au



Phone
1300 067 222



THE *Premium* MOTORHOME

This is your complete guide to our Premium Motorhome. Any questions you have may be in this booklet however, if not, please feel free to call our helpline and speak to one of our staff members.

www.autorent.com.au

General Overview



THE

Premium MOTORHOME

We've selected Avan as the manufacturer to produce this low line vehicle for us. Built on the Fiat Ducato cab chassis, it's Diesel, Automatic, walk-through with front swivel seats, has air conditioning and heating along with a separate small bathroom including a shower and toilet.

THINGS TO NOTE

Check the vehicle condition report before leaving the depot.

Be familiar with advisory stickers on windscreen:

- note unsealed road travelling warnings
- when driving, keep to the left hand side of the road
- be aware of your vehicle's clearance height (3.2 metres).

Take extra care when parking or turning off the main road.

Do not park in multi-storey car parks; be careful of awnings, low verandahs, petrol station canopies and tree branches. Do not 'cut' corners.

If visiting fast food outlets (such as McDonald's), stay in the car park area. Do not go through "drive thru's".

To reduce the occurrence of condensation during cooler nights, use the heater in conjunction with leaving a window/vent ajar. Ventilation is crucial.

Tasmania has many nocturnal animals, who come out to feed early evening and early morning. When travelling at night we recommend travelling at much slower speeds. Hitting them injures them or worse, and also damages the vehicle.

During windy conditions, we recommend reducing your speed on the motorways as taller vehicles are susceptible to 'side' winds.

Smoking and pets are not permitted in our vehicles.

On return of your vehicle, please ensure the interior of the vehicle is in a clean and tidy state, with all used linen placed in the ensuite, and that all dishes, pots and pans are washed. The toilet cartridge needs to be emptied at the end of the rental. Failure to do so will incur a \$50 cleaning fee.

Familiarize yourself with the vehicle controls(the vehicle handbook is located in the glovebox), adjust mirrors before setting off.

Before heading off always walk around vehicle to make sure everything is unplugged, windows closed and latched, overhead hatches closed, tyres ok, outside doors closed securely and check for any obstacles that may hinder driving.

INSTRUCTIONS



- To unlock the cabin doors and home door press the top button on the vehicle remote. Press the middle padlock button to lock all vehicle doors.
- Start the engine with your foot on the brake pedal. Release the handbrake (located to the right of the driver's seat) and drive in 'D'. The vehicle has lane departure warning and will beep if wandering from lane. The vehicle has auto 'stop/start' and will shut the engine off when stationary and start again when you release your foot from the brake pedal.



- The diesel fuel cap is located next to the passenger door - use the ignition key to unlock by turning the key anti-clockwise (to the left), then remove the cap by rotating it anti-clockwise. REMOVE the key while refueling to prevent diesel spilling on the key. After refueling with diesel, replace the cap and re-lock. The fuel tank holds 110 litres of diesel. This vehicle has an 'AD BLUE' filler below the fuel, do not open or fill at this tank. The Ad Blue is topped up by our staff before rental. This should last about every 3000kms. A warning will appear on your screen if this needs to be filled. Please contact our technician for assistance on 0418 138 026 if this occurs.



- The vehicle height is 3.2 meters.
- The front seats have a seat swivel lever located on the inner side of the seat base. Pull this lever outwards as you rotate slowly.
- The LP gas bottle is located near the driver's door. Open the access door with the black key on your key set. Turn anti-clockwise to turn gas on. Clockwise to shut off. The gas must be turned off when travelling.

INSTRUCTIONS



- The 240-volt extension cable is located in the rear driver's side compartment. The 240-volt power cord access plug is located near the driver's door. Lift the cap, plug in the extension cord and connect to a 15amp 'site' power point, then switch on the power. This will enable power to all of the electrical devices and will recharge the Motorhome's deep cycle battery pack in about 4-5 hours (it's ok to leave plugged in overnight). The batteries do not provide power to the microwave oven, the power points, A/C or DVD player. The motorhome must be plugged into a 240v mains socket on a powered camp site for these items to work.



- The toilet cartridge access door is located on the driver's side in the middle of the vehicle. It is not locked. Push both buttons at the same time with your thumbs to open the door. Make sure the lever on the toilet bowl is in the closed position before removing the cartridge. Lift up the blue catch on the cartridge, and pull towards you using the handle to remove the cartridge. Take the cartridge to a campervan 'dump' point and unscrew the lid. Carefully empty the contents, rinse well with water, add a chemical sachet (provided), then add about a cup of water (300ml), re-install the cap and re-insert the cartridge. Before returning the van, make sure the toilet cartridge is empty or a cleaning fee of \$150 will apply.



- The water fill cap is located on the passenger's side under the flap marked 'water'. Lift the door and turn the cap firmly to the left – no key required.
- The 'grey water' holding tank capacity is 110 litres and should be emptied daily. It should be emptied at 'dump points' or where appropriate to do so. Open the release handle and attach the hose if needed. The hose is stored next to the LP Gas bottle.

INSTRUCTIONS



- The rear luggage compartment on the passenger side opens with the black key (push the door inwards while turning the key) Inside is the hose to refill the fresh water tank. Also stored here is the awning handle, the broom, a bucket and clothes line.
- The bonnet latch is located on the passenger side front door cavity. Open the door to gain access to the bonnet release lever if required.
- To operate the awning first remove the winding pole from the rear of the motorhome. Attach the winding pole to the socket on the left side of the awning and pull downwards to lock in place. Wind the handle anti-clockwise until the awning is extended approx. 1.5 metres. Lift the top of the two white plastic wall brackets on the side of the van. To release the 'arms', pull the arms of the awning outward from the awning frame edge by pushing inwards on the arms at the arrow sticker, and extend them vertically. From here you can attach the arms to the wall brackets on the side of the van. Adjust the arms to the desired height and tighten both locking latches on the arms and both latches on the inside of the frame edge. To close the awning undo the locking latches and wind awning in clockwise approx. 1.5 metres from the wall. Lift the locking tabs and remove the arms from the wall brackets. Rotate arms at hinge joint and stow the legs into the frame. Continue to wind in gently until completely closed.

-
- The fire extinguisher is located just inside the home door area mounted near the roof.
 - The control panel is located just inside the home door area, please be cautious of the stair way when accessing the control panel. To 'wake' up the panel press the 'load' switch. Turn the 'pump' switch on use the taps shower and toilet. Turn the 'load' switch to 'on' (displays as tiny green 'on' symbol) so the vehicle can charge from either 240V or from the solar. The load also needs to be 'on' for powered bed operation.
 - To turn on the water heater, first turn the LP gas bottle on, then turn the switch marked 'ON' (located in the metal external cupboard on the driver's side). Turn on the water 'PUMP' switch on the control panel so the green water pump symbol is on. The hot water will take about 20 seconds or so to heat up ready for use. Turn switches and gas bottle off when not in use.
 - The microwave oven is located above the fridge for use when connected to the 240-volt main power.

INSTRUCTIONS



- To operate the bed. The switch to lower the bed is located next to the kitchen tap. Lower the rear dinette table using the handle underneath the table top. Remove the rear lounge backrests to allow the bed to lower to normal bed height. Press the switch up or down to move the bed into the desired position. There is a step ladder provided for access to the double bed for when it is lowered half way to allow two people to sleep on the double bed below. Two segments of mattress/cushions are provided to make the lower bed when the dinette table is used as the bed base in the lowest position.
- To operate the fridge The fridge should be on ready for use. We recommend having the fridge on '3 bars' and the freezer on '2 bars'. To adjust the settings, hold down on the display next to the on/power button until it flashes, then adjust by pressing the desired setting.
- To operate the oven or grill you need the LP gas bottle turned on. With the oven door open, push the black dial in to start the ignitor and turn the dial to either 'grill' or oven'. You may need to hold the dial in for around 5 seconds until the flame is established. Make sure all dials are in the off position when not in use & ensure the dials push inwards/outwards freely.
- To use the hotplates, first have the LP gas turned on, then hold down the switch with a 'star', and then turn the required 'knob' to the 'large flame'. Then push the knob inwards at the same time for up to 5 seconds. When using any function of the cooker have the hotplate lid open, and ensure it is closed when travelling. Turn the exhaust fan on when cooking. DO NOT lower the hot plate glass lid until 15 minutes after cooking.
- The sunroof in the main living area can be opened by turning the latches and pushing upwards. The sunroof is fitted with a block out and fly screen. DO NOT travel with the sun roof open.
- Turn the diesel heater dial on for ducted home heating when not connected to 240v power. It is located in the rear dinette area.
- The air conditioner/heater is for use when connected to a powered site and operated by the remote control attached on the wall next to the bathroom door.
- The TV/DVD can be turned on via the remote control which is located in the overhead cupboard above the dinette. To pull the TV out, pull the lever behind the TV. The TV needs to be retuned via the 'auto scan' function when travelling to different areas. To re-tune (or to watch TV), select 'DTV' with the source button on the remote control, select 'MENU', then 'CHANNEL', then 'AUTOSCAN', then 'ALL' (this may take up to 5 minutes to complete). To watch DVDs, select 'DVD' with the source button.
- A smoke detector is mounted on the ceiling and will sound an alarm if the presence of smoke is detected. The gas alarm and circuit breakers are mounted below it.
- Cupboards open them all to familiarize yourself with the contents and make sure all are locked before travelling.
- To use the toilet, first move the lever on the front of the toilet bowl to open the cartridge so it is ready to receive waste. The toilet bowl can be swiveled sideways to allow easier use. Flush the toilet, close the toilet lid, then close the cartridge lever on the front of the bowl.
- Only use the shower with the shower screen closed and ensure a bath mat is used and the bathroom floor is kept dry.
- The bathroom sunroof is operated by pulling downwards on the bar and sliding simultaneously to open or close. DO NOT travel with the sunroof open.



2-BERTH CAMPERWAGON

DUAL CAB UTE WITH ROOF TOP TENT

4-BERTH "HI TOP" CAMPERVAN

2-BERTH COMPACT MOTORHOME

PREMIUM MOTORHOME

VEHICLE DIMENSIONS				
HEIGHT (EXTERNAL)	2300mm (7'5")	3100mm (When Extended)	2550mm (8'4")	3100mm
LENGTH (EXTERNAL)	5130mm (16'8")	5200mm	5000mm (16'3")	7300mm
WIDTH (EXTERNAL)	1985mm (6'5")	1980mm	1690mm (5'5")	2470mm
HEADROOM	1200mm (3'9")		1840mm (6')	1950mm
VEHICLE & DRIVING				
TRANSMISSION	Automatic	Automatic	Automatic	Automatic
ENGINE TYPE	Petrol	Diesel	Petrol	Diesel
FUEL CAPACITY	80 litres	75 litres	70 litres	Approx. 60 litres
DUAL BATTERY SYSTEM	No	Yes	Yes	Yes
CHILD RESTRAINT ANCHOR POINTS	No	1	1	2
BIKE RACK	Not Applicable	Not Applicable	Optional Extra \$50 (free with bike hire)	Included
MAX SEATING WHEN DRIVING	2	5	4	4
AUDIO	AM/FM/USB	AM/FM/USB	AM/FM/USB	AM/FM/USB
GPS NAVIGATION SYSTEM	\$7 / Day Hire (\$50 max)	\$7 / Day Hire (\$50 max)	\$7 / Day Hire (\$50 max)	Included
AIR CONDITIONING	Drivers Cabin	Drivers Cabin	Drivers Cabin	Drivers Cabin & Home
CRUISE CONTROL	Yes	Yes	Yes	Yes
LIVING AREA				
SOLAR PANEL	No	No	Yes	Yes (200 watt)
12V & 240V LIGHT & POWER	No	No	Yes	Yes
EXTERNAL AWNING	Yes	Yes	Yes	Yes
DINETTE TABLE	Yes	No	Yes	Yes
TV/DVD (ALL 12V)	No	No	Yes TV & DVD	Yes TV & DVD
HEATING	No	No	Electric Air-flow Heater (240v)	Ducted Diesel
TOILET	No	No	No	Yes
SHOWER	No	No	No	Yes
LP GAS CAPACITY	930g (2x 465g starter kit)	1x 2kg Bottle	3kg	9kg
DRINKING WATER CAPACITY	Not Applicable	Not Applicable	30 litres	103 litres
GREY WATER CAPACITY	Not Applicable	Not Applicable	Not Applicable	110 litres
BED DIMENSIONS	Dinette Converts to Bed 1800 x 1200mm (5'11" x 3'11")	Bed in Roof Top Tent 1900 x 1400mm	Forward Dinette Converts to Double Bed 1850 x 1440mm (6'1" x 4'8") Bed in Roof 1900 x 1400mm (6'3" x 4'6") • Can take 2 children under 16 years of age	Electric Roll Down Double Bed 2000 x 1325mm Rear Dinette Convertible to Double Bed 2125 x 1430mm
OUTDOOR TABLE	Included	Included	Available for Hire at Extra Cost	Available for Hire at Extra Cost
OUTDOOR FOLDING CHAIRS	Included	Included	Available for Hire at Extra Cost	Available for Hire at Extra Cost
BEDDING LINEN & TOWELS	Included in rental, per person (extra cost for extra kits)	Included in rental, per person (extra cost for extra kits)	Included in rental, per person (extra cost for extra kits)	Included in rental, per person (extra cost for extra kits)
KITCHEN FACILITIES				
COOKING	Butane Gas Cooker	3 x Gas Hotplates	LP Gas Cooktop & Griller/Microwave Oven 240v	3 x Gas Hotplates, Oven and Microwave
ELECTRIC TOASTER (240V)	No	No	Yes (240v)	Yes
COLD FOOD & DRINK STORAGE	Portable Fridge (31 litres) 2 way (12v + 240v adaptor)	Portable Fridge	Fridge & Freezer (40 litre fridge) (12v & 240v)	Fridge & Freezer (150 litre fridge)
FRY PAN	Yes	Yes	Yes	Yes
DISHWASHING	Large Plastic Tub	Large Plastic Tub	Kitchenette Sink	Kitchenette Sink



**We hope you enjoy your
holiday with us!**